



IN  
MOTION

## Hydrocollator – cleaning and maintenance

The hydrocollator must be thoroughly cleaned at least every two weeks.

- The tank must remain switched on day and night when Moist Heat Packs are inside. This is necessary to maintain a constant temperature and to prevent slime or mould formation on the Moist Heat Packs.
  - If this is not respected, slime may develop and eventually turn into mould.
  - If slime forms on a Moist Heat Pack, it must be rinsed with clean tap water to prevent contamination of the other packs.
  
- The inside of the hydrocollator must be cleaned at least every two weeks using a mildly abrasive bathroom cleaner and a soft cloth or scouring sponge. Stainless steel wool may be used if necessary.
  - As soon as clay or other residue from the Moist Heat Packs is present in the hydrocollator, the unit must be cleaned.
  - The clay can harden in the tank and leave residue on the Moist Heat Packs that are inside.

## Moist Heat Packs

- In case of slime formation, rinse with clean tap water.
- When not in use, store the Moist Heat Pack in a zip bag in the freezer.
- Do not mix different brands of Moist Heat Packs in the same hydrocollator.